

CRESCO SPREADER SETTINGS

The settings furnished on the Rate Setting Matrix are intended as a guide only. Variations in physical characteristics of material applied, walking speed, and roughness of ground surface may require slightly different spreader settings. Due to the above conditions, Agrovista makes no warranty as to the uniformity of coverage obtained from the settings listed.



Single Pass

Single Pass
Double Pass
Triple Pass

Using 3 Hole Slider			
Cresco	Spread Width (M)	G/m ²	Setting
Micro (Granule size ≤ 1.5mm)	3	15	10
		20	11
		25	12
		30	13
		35	14
Mini Granule (1-3mm)	3.5	25	13
		30	14
		35	16
		40	17
Large (3mm+)	3.8	35	14.5
		45	16
		55	17.5
MO Bacter	4	50	20
		75	20
		100	20